
Specifications

Features

- 5 year warranty
- Manufactured with solar power
- Designed and built in North America
- very low battery consumption
- Extreme -40°C to +50°C (-40°F to +120°F)
- Reliable -100% solid state, quiet
- No need to derate
- Stainless steel case

Model S11D

Electrical Specifications

Voltage configurations 12 volts and 24 volts
(custom voltages 6 to 36 volts)

Max. PV open circuit voltage 60V

Max. Charging current at 50 °C (+120F) 11 amps DC

Battery consumption 0.7mA, 2.5 mA

Typical set points: 14.4V / 28.8V Volts at 20°C (68°F)
temperature compensated.

General Specifications

Temperature range: -40°C to +50°C (-40°F to +120°F)

Case: Stainless steel case.

Weight: 440 grams (15.6 oz)

Size (H x W x D): 8 x 14 x 4.5 cm (3.125 x 5.5 by 1.75 inches)

Mounting: wall mountable

Terminals: 12-24 AWG

Features & Options

Status Light: charging

Regulation method pulse width modulation (PWM) type. Built in blocking diode. Custom voltage setpoints.

- Dual Version – charges two isolated battery banks with a single control. Perfect for boats or recreational vehicles with dual battery systems.

Warranty

Full 5-Year Warranty

Warranted in entirety, except abuse, within a period of 5 years following the date of purchase. In the event a defect develops during the warranty period, return the unit to eco energy, postage paid. Eco energy will repair or replace the product with a new or reconditioned unit of equivalent quality.

Eco Energy

Since 1992, Eco Energy has been in the business of designing and manufacturing solar charge controllers, battery chargers, low voltage disconnects, current boosters DC converters and battery voltage monitors.

Eco Energy controls are currently used in power systems for remote homes and cottages, recreational vehicles, boats, telecommunication and navigational systems, parking meters, natural gas pipeline telemetry and other solar battery charging applications around the world.

Eco Energy is powered by solar power.



57 Alexander Street
Belleville Ontario
Canada K8N 2H4
Phone: 613 962-9889
Fax: 613 962-9889
Email: info@eco-energy.ca

www.eco-energy.ca
www.eco-energy.us

Printed Nov. 2014

Installation Guide

Advanced PWM Solar Charge Control

Dual Battery 11 Amp - 3 Stage



Intelligent Charging Solutions

Advanced Solar Charge Controls

Our latest innovation in controls. Tough, easy to install and practically indestructible.

This high performance solar charge controller increases battery life by preventing overcharging. Overcharging can cause corrosion and buckling of the lead plates, increased battery water loss and excess hydrogen gas.

The control also prevents power loss back into the solar modules at night, so an external blocking diode is not required.

Efficient Design – our latest innovation; automatic nighttime shutdown with an intelligent design results in the controller using < 1/10th the power of the industry average. Other controls stay on all night, wasting precious power.

Safer - Eco Energy controls have more built in protection and safety features than any others on the market. They feature automatic over-temperature shutdown, protection from battery removal conditions, over-current, short circuit and over-voltage protection of the inputs and outputs. Important in remote remote applications where reliability is critical.

Dual Battery - option specifically designed for systems with two isolated batteries charging from one panel, such as RVs, and boats.

Going solar with confidence has never been easier.

Installation and Operation

Location

The control needs to be in a cool location in order to function properly. It should not be in direct sunlight, or mounted in a hot location such as the back of a solar module. The control should be installed near the batteries, to ensure an accurate battery voltage and temperature measurement. The distance from the solar panels to the controller should not exceed 60 feet.

Wiring


#14 AWG or larger wire should be used. Battery Neg-terminals are connected together in the control.

The control keeps the batteries isolated from each other on the positive side.

It is important to only have one ground wire to the control on the battery side, if the ground between the two batteries becomes disconnected too much current would flow through the controller.

Do not use the terminal between the two battery positives.

As an additional safety precaution fuses can be installed between the battery positive output of the control and the positive terminal of the batteries.

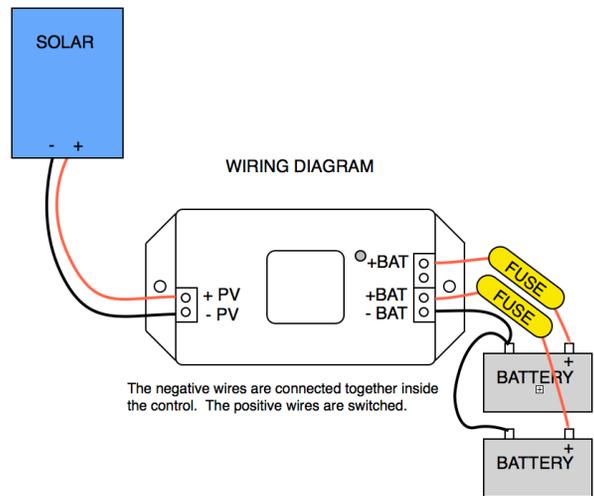

Operation

The controller protects batteries from overcharging. It allows solar power to charge the batteries until the batteries rise to the full voltage set point. It then maintains the battery voltage at this setpoint. Because a battery voltage fluctuates, it is normal for the charging light to turn on and off as the battery approaches full charge. When full charge is achieved the charging light will go out completely.

Charging Flashes

One Flash - Charging below charging setpoint
Two Flashes - Charging at charging setpoint
Three Flashes - In float charging mode

The control will switch to float mode after the battery has been at the charging setpoint for a minimum of 10 minutes and a maximum of 4 hours. The amount of time the battery takes to reach the charging setpoint determines the amount of time that is required before switching to float mode. The control will stay in float mode for a minimum of 5 minutes. If the battery voltage drops below the float setpoint a new charging cycle will begin.

At night the control shuts down to save power.

Fault Conditions

The charging light is off to indicate a fault during solar short circuit, solar or reversed battery, over-temperature and battery short circuit conditions. Remove solar power to reset the control.

No damage will occur if the battery is removed, or if the control is directly connected to the solar module without a battery. In this case the charging light turns on briefly when the solar module is first connected.

Verification of the Voltage Set point

A power supply can be put on the input with the power supply current limit at or below the controller rating. The charging light should go out when the battery voltage exceeds 14.4 volts at 20°C (68F).